





How to upgrade Camera firmware

1, Preparations:

One computer, router or switch, LAN cables,



Step1: connect IP camera and your computer in the same local area network via router and LAN cables

Step2: Install “IP camera finder”, download link: <http://www.eye4.so/download/>

 Eye4 For Android Client for android mobile,provides functions: real time access,taking pictures based on fixed time or when alarm is happened. Download Other Download QR Code	 Eye4 For iPhone Client installed on iPhone can proved real time access of IP Camera. Download QR Code
 Smart upgrade tool Using this tool,can just press a button to automatically upgrade IP-Camera's firmware to the latest one.	 IP Camera Finder Used to search IP-Cameras located in LAN, Camera settings. Windows: Download Other Download

2, how to upgrade Firmware

a,Click “ Manual upgrade”, input camera password---> click “OK”

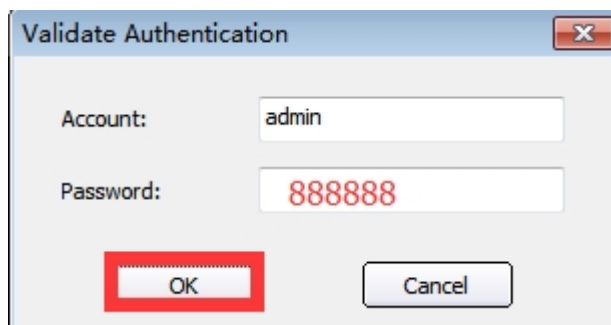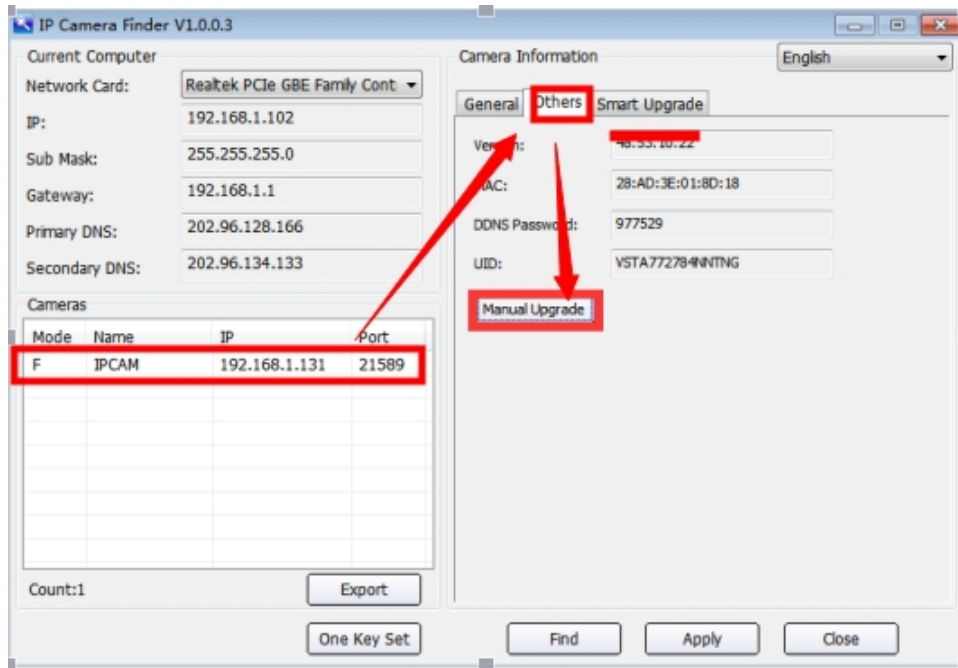

b, Click "system firmware"-->"Open", search the corresponding system firmware--> Upgrade

Note: Please save the system firmware in your PC first,

The camera will reboot after clicking upgrade. Please don't cut off camera power when camera is upgrading

