



Alarm settings

1. Login the APP, select the camera, click on the three dot on the camera's top right corner→click 'Parameter Settings' →click 'Alarm '

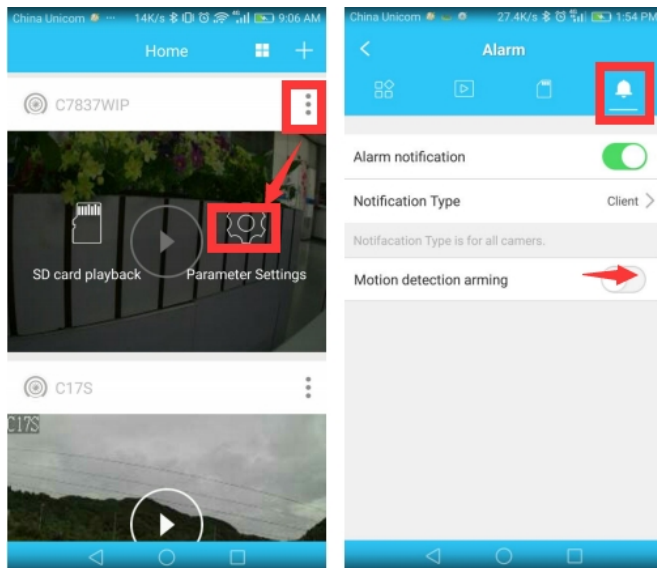


2. Then you can see 'Alarm notification' , "Notification Type" and 'Motion Detection arming' . Notification Type. There are two notification type:client and email. Click them respectively to view their setup guide, please follow the guide step by step.

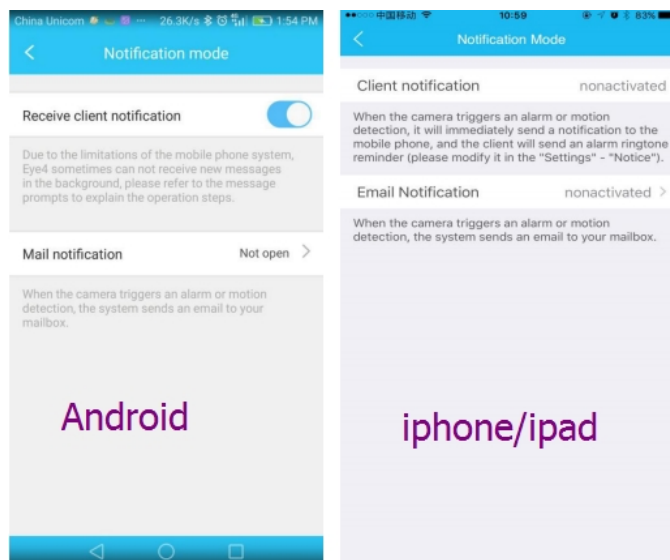


3. Motion Detection Alarm. When turned on, the options of sensitivity and time schedule of the motion detection will pop up. Motion detection sensitivity. Can be set to three grades: low, middle and high. The higher, it's easily to trigger alarm. Users can set the sensitivity based on their actual needs.


4. Schedule: People can set the time schedule for motion detection alarm.

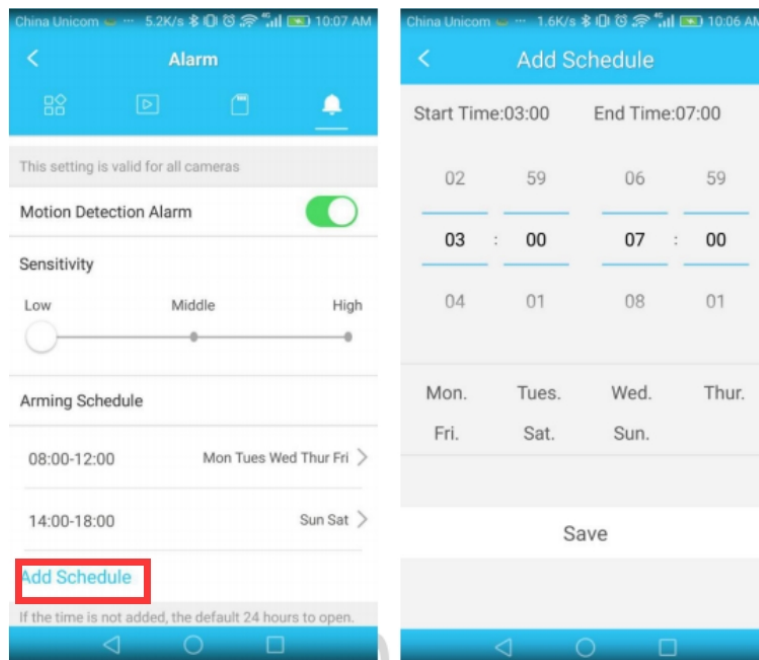

Notification mode --- client notification

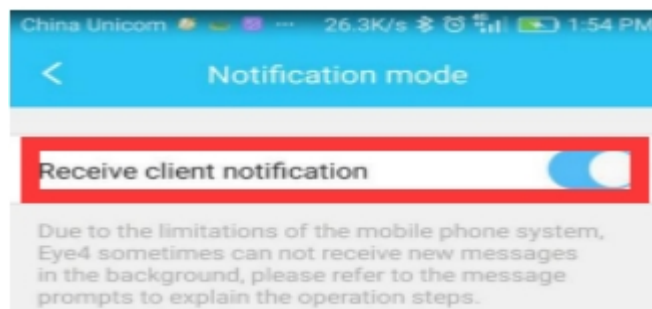



1, When trigger motion detection alarm, you will receive client notification in your phone;

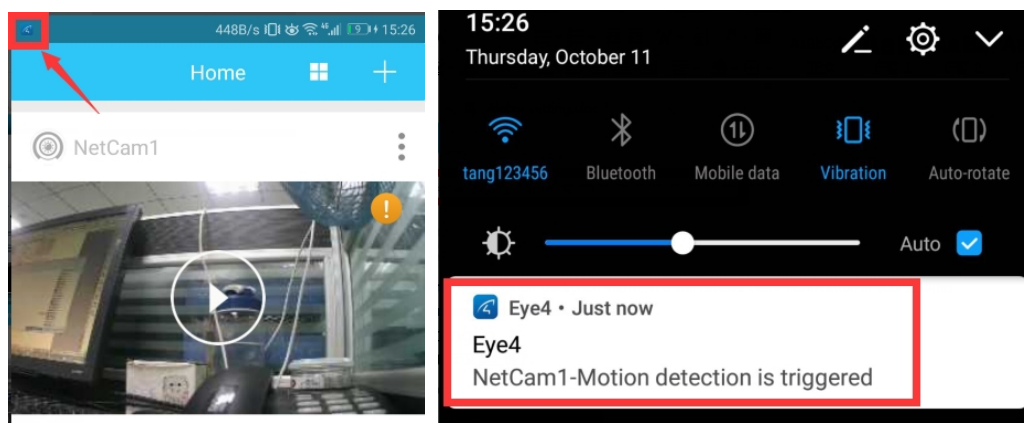


2, click this message--> Alarm message Details

You can know about the alarm device name, time, and alarm content is motion detection;



3, You can also add "Emergency call"--->input your phone number--->done

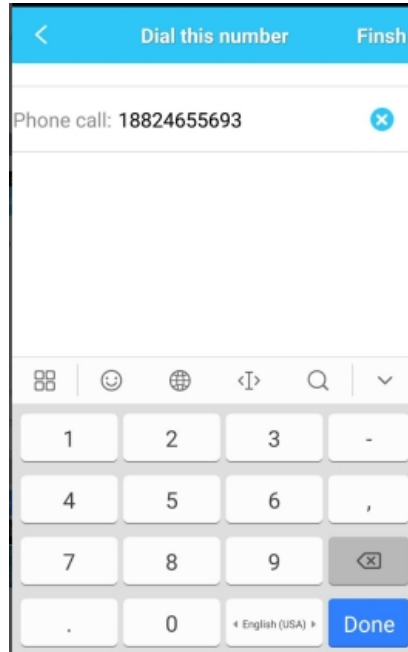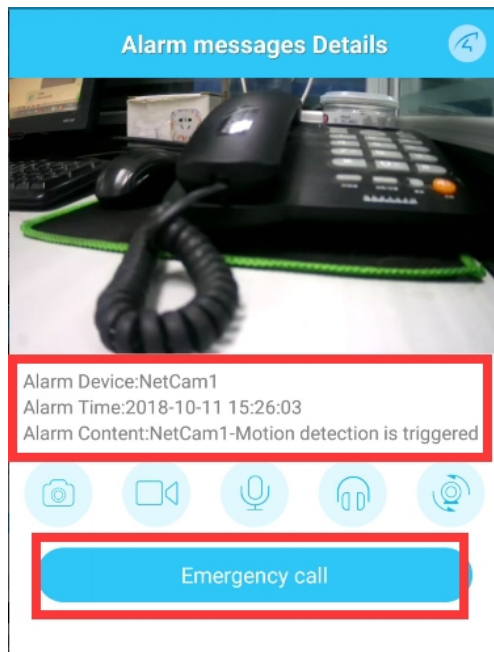


Email Notification

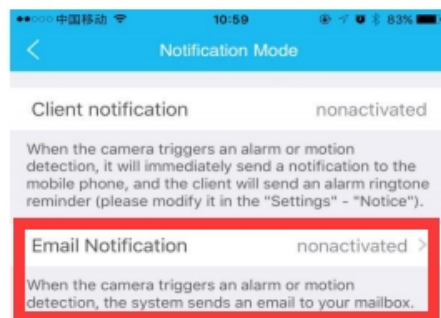


1, Firstly, Please verify a email address, input your email and click on "OK"

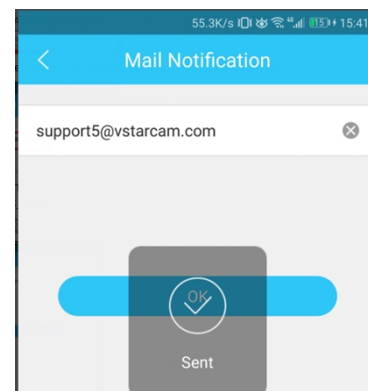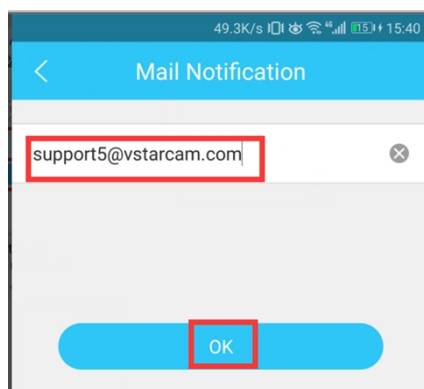


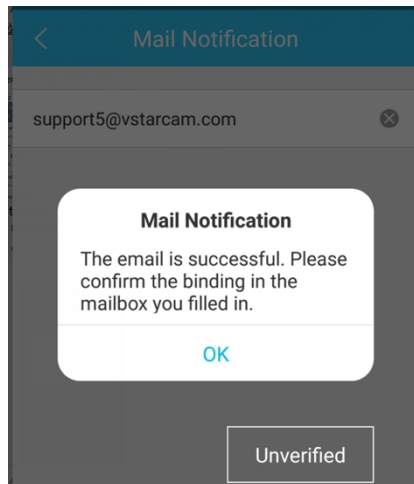

2, Open your mail box to verify it;

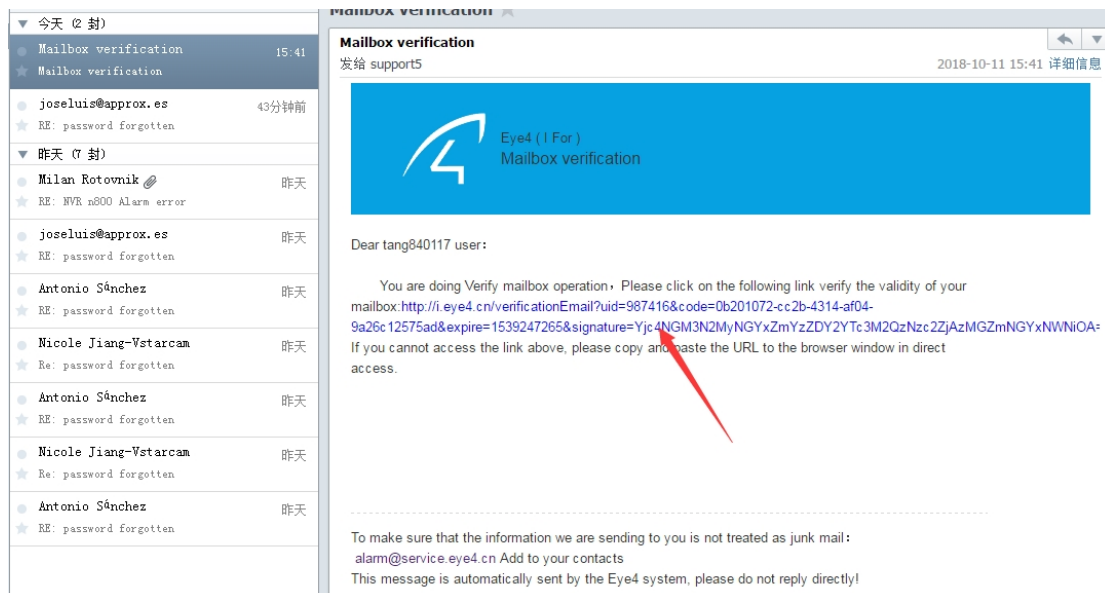

3, Return on your phone APP, You can see this email have been verified already.

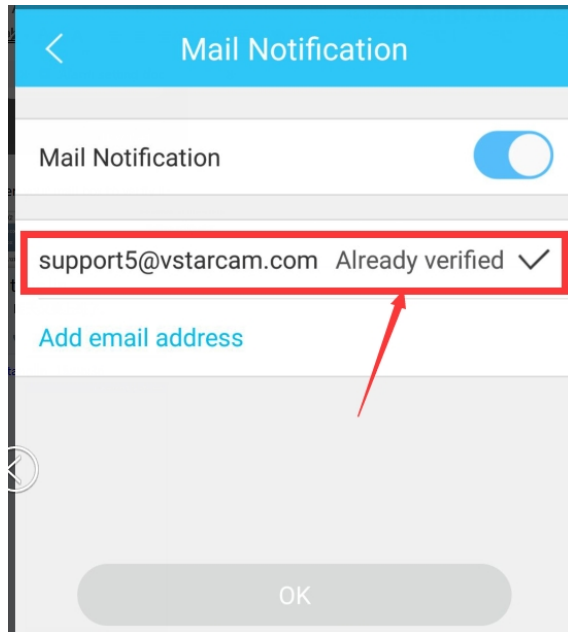

4, Trigger motion detection alarm, you can receive email messages in your mail box.

