


Forget NVR Login Passord

If forget NVR login passwork, you have to disassembale the NVR to obtain login permission, the steps as follows:

1. Disassmble the NVR,



2. Loose and take out all screws, open the top cover, then unistall and remove the battery for more than 5 minitues, reinstall it back,

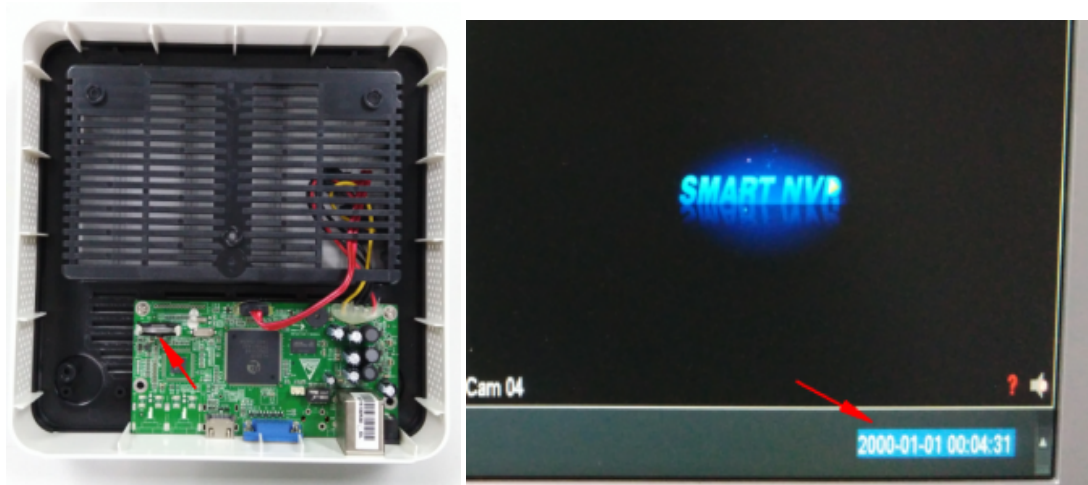

3. 5 minutes later, reinstall the NVR and connect cables, you can see the time (the year 2000) on the display, input the password 000000 to login, then you can modify the password after loginning, please remember these password.