


# 1.Product description

①Name:Doorcam

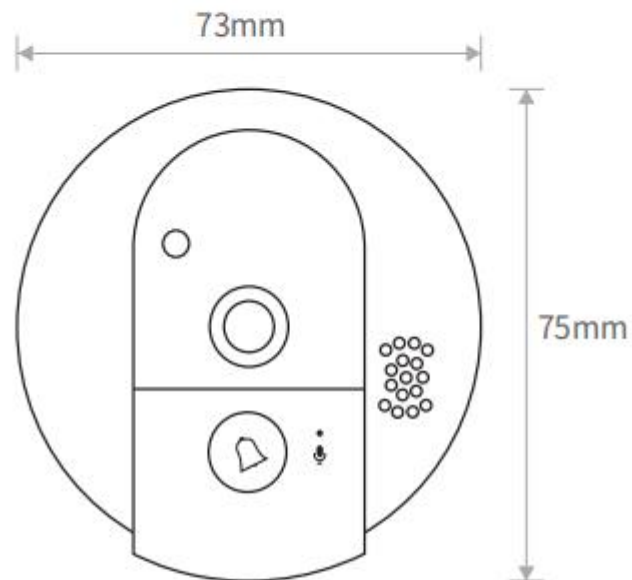


Resolution:1280\*720

Rated voltage:DC5V±0.3V/1A

Night vision distance:5M


Power consumption:1W

---

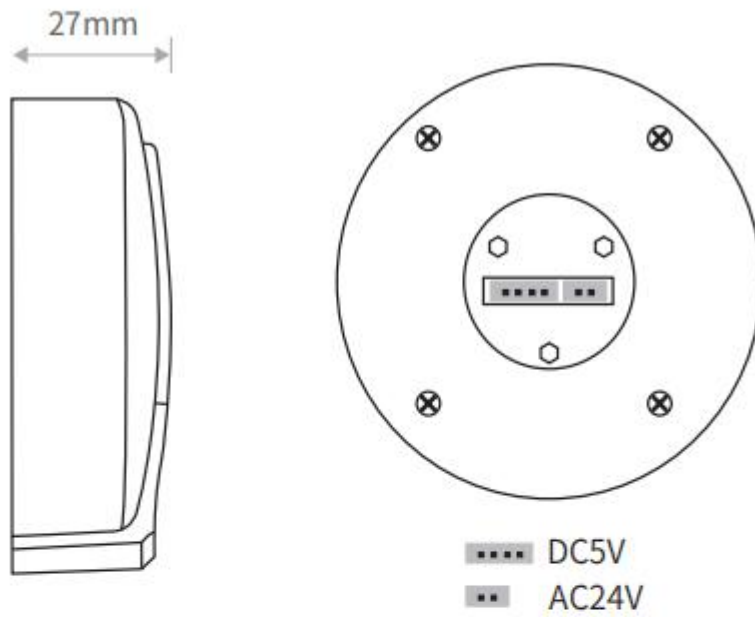

**Note: User can choose the correct power input interface according the actual environment.**



## ②Wireless indoor doorbell

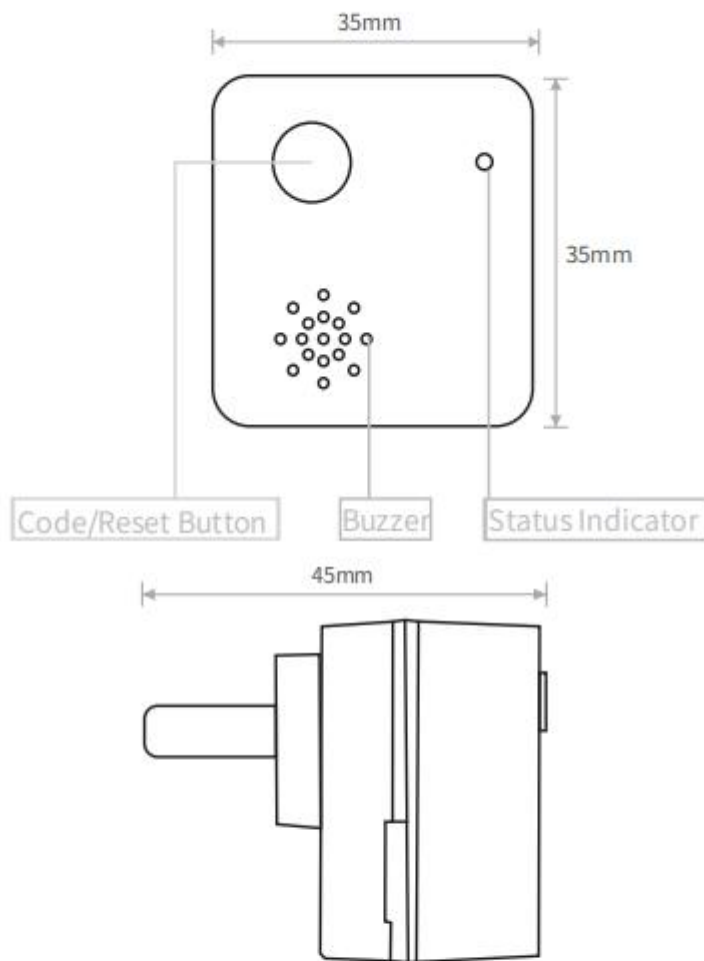


Operating Frequency: 433MHZ  
Communication distance: 70 meters  
Power consumption: 2W (buzzer)  
Rated voltage :AC110-240V50/60HZ

## 2. Product installation

### ① Wall mounting

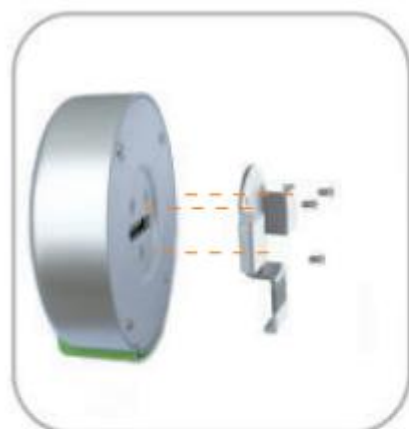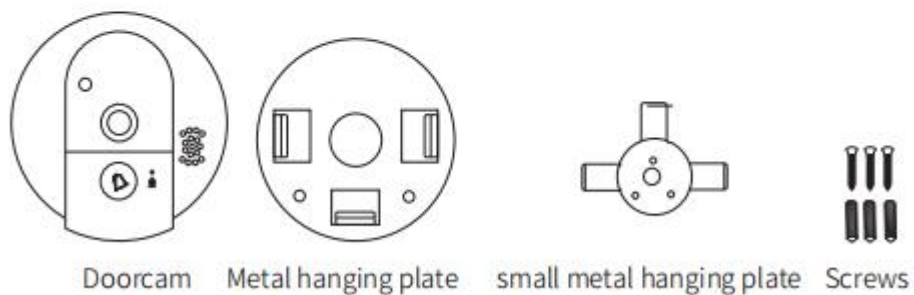


1. Install the plate on the doorcam

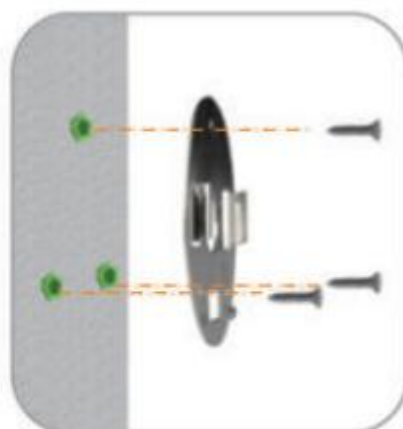

2. Place the metal hanging plate on the wall



3. Hanging the doorcam on the metal plate

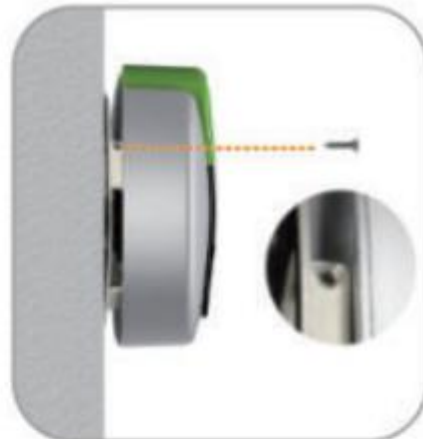


4. Screw tight the doorcam


## ② Peephole installation




Doorcam

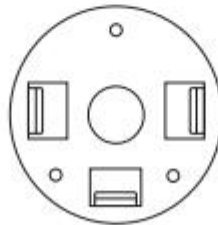


Metal hanging plate

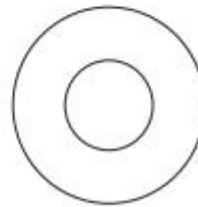

EVA foam rubber

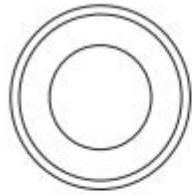

Lid

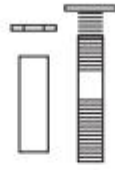

Screw



Screws



1. Assemble the doorcam with the screwstick.



2. Stick the EVA foam on the doorcam.



3. Place the assembled doorcam on the door.



4. Put the metal hanging plate on the screw stick.



5.Screw tight.



6.Cover the lid.

**No matter which installation method, finally only need to install the indoor doorbell within 70m from the doorcam.**


### **3.Software download**

- ①Go to [<http://www.eye4.so>] download.
- ②Scan below QR code to download.



## 4. Register an account

Android/iOS client click “Sign up now” , input user name and password to finish registration.

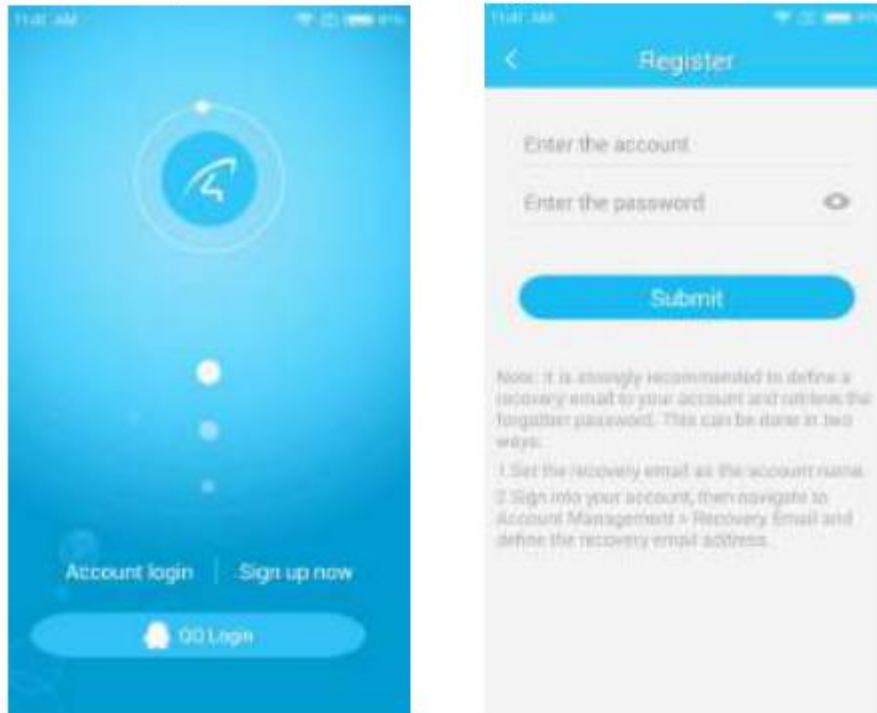


## 5. Add camera

Click “+” , enter device management interface. There are three options to add camera:


① Doorcam please choose: WiFi configuration; (Place the smartphone close to camera when hear the device voice prompt, follow the APP voice prompt operation. It




will ask to input wifi password the phone connected for the first time configure. Paired successfully, there would be voice prompt.)Note: If there is no voice prompt after started, please restore the device to factory setting.

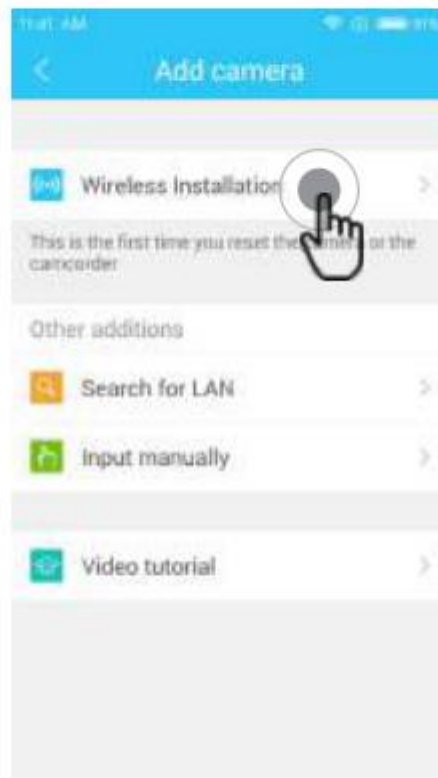

②When sound configuration success, please wait for about 15s, there would be a reminding “whether binding immediately” ,click add complete the binding operation.

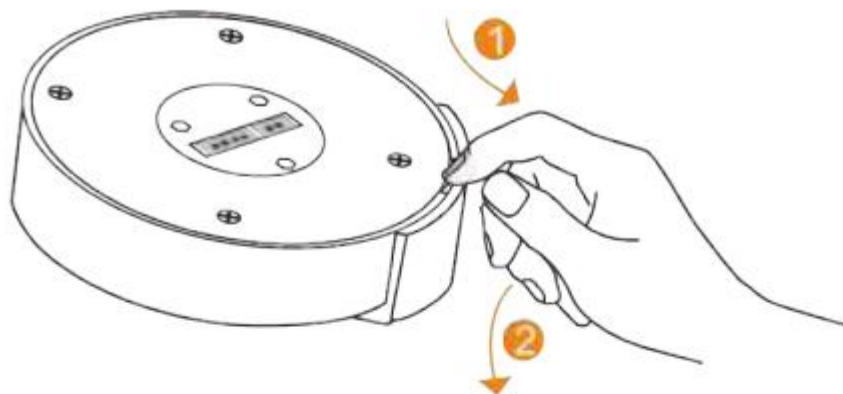

**PIC 1**

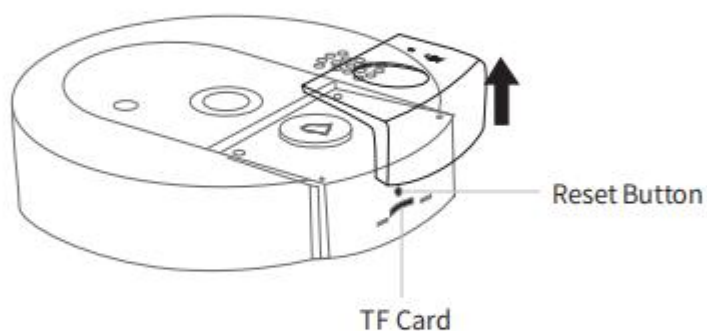



**PIC 2**

Restore back to factory setting: **【as pic shows】** remove the doorcam housing, find the reset button, connect the power adapter, use a thimble to press the reset button for about 10s, then will hear the voice prompt, default password: 888888







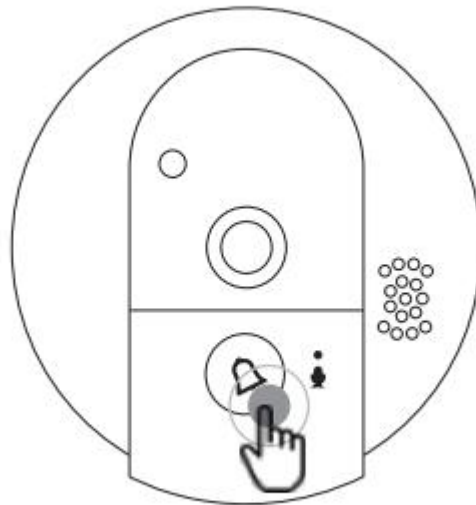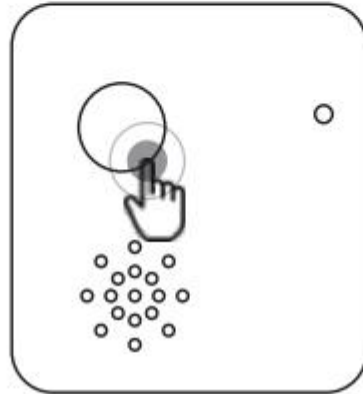

TF card installation: [As Pic 2]shown, find the TF card slot location, install the TF card.

## 6. Code matching the indoor doorbell

Both indoor chime and doorbell are powered, short press the code button(the indicator light will flash white), then press the doorbell button, if the indoor chime response then the code matching success.







## 7.Video interface description


 Preset position	 Full screen
 Listen unable	 Enable listen
 Talk unable	 Enable talk
 Snapshot, pictures saved in smartphone SD card /DCIM/Camera	
 Record, video saved in smartphone SD card /DCIM/Eye4	

**Note: Some feature need hardware support.**

## 8.Setting

- ①  Camera setting: can check camera information ,set up wireless connection, modify password, upgrade firmware and delete camera.
- ②  View video: can setup night view mode, horizontal and vertical mirror view, light mode, brightness and contrast.
- ③  SD card recording: can check SD card capacity, setting schedule recording, motion detection recording and select recording sound or not.
- ④  Alarm: can turn on/off the motion detection alarm, setup the alarm notification type, and alarm time frame. The sensitivity of motion detection alarm was graded into three level “low/middle/high” .



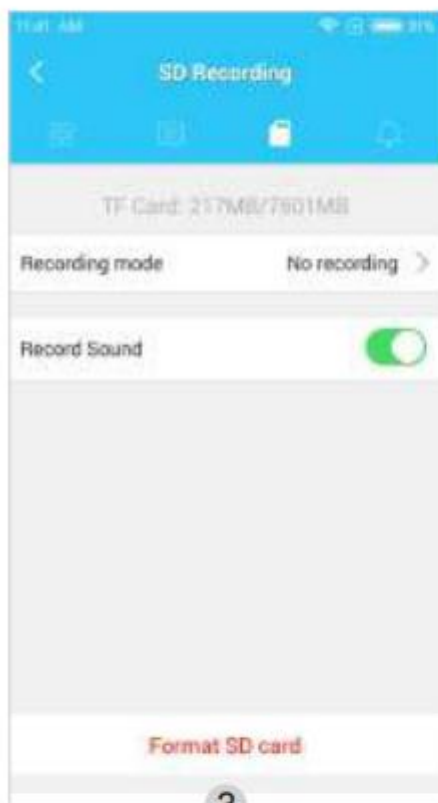



3





4

## 9. Message push

① Enter APP, click camera up right corner icon  — parameter setting— choose  —enable motion detection—select sensitivity level and add alarm schedule.


② Choose alarm notification type

③Push notification: if enable the client alarm notify, when someone press the doorcam, smartphone will have vibration and sound remind; click can view or ignore.( Attention: Meanwhile the indoor doorbell will have ringtone when have notification push .)

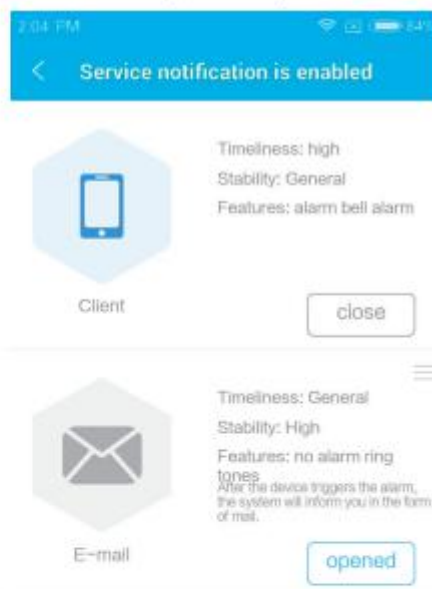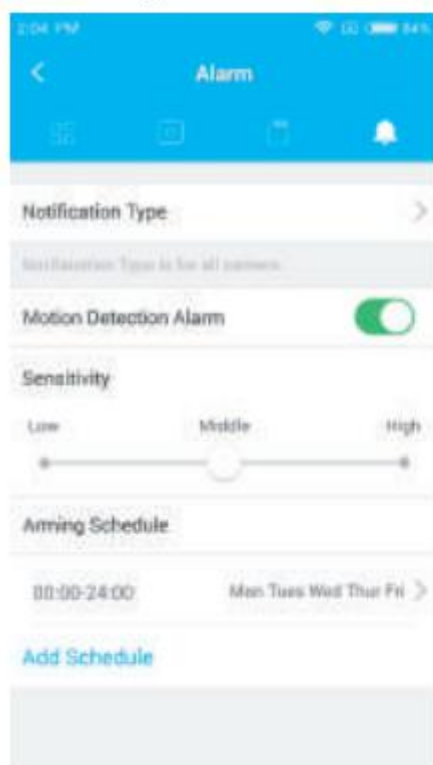

## 10. Message center

Message center can record doorcam alarm, linkage alarm and normal IP camera motion detection triggered alarm log, show the alarm real status and time, click can view the real time video.

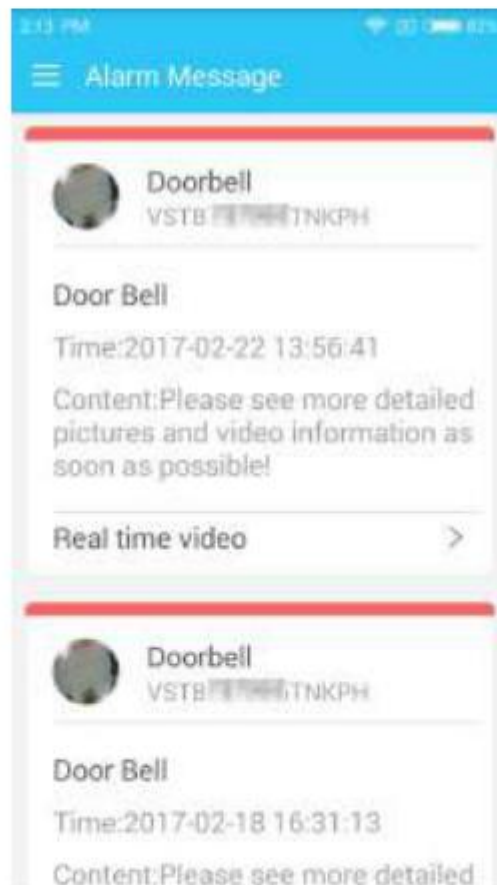



## **11.Security center**

Security center can setup device weak password, phone binding,email binding, gesture password and firmware upgrade; click test to check all the security status.

# Service

VStarcam FAQ Center: <http://FAQ.ey4.so>

Hotline&QQ:4006217868

Email:[support@vstarcam.com](mailto:support@vstarcam.com)

Shenzhen VStarcam Technology Co.,Ltd

[www.vstarcam.com](http://www.vstarcam.com)

The manual is made based on the eye4 4.0 version, the interface will be some different cos of the app update.Please refer to the actual version as standard .



**3-05-01-007-4035**